

Programming Your Thermostat

There are two types of thermostats used in CVA. Yours may say Trane or Honeywell or perhaps another brand, but it will look like one of the two images below.



To program your thermostat, follow the directions beneath the image that looks most closely like your thermostat.


Programming Your Thermostat

Thermostat One




Set the time and day

Press SET CLOCK/DAY/SCHEDULE, then adjust time

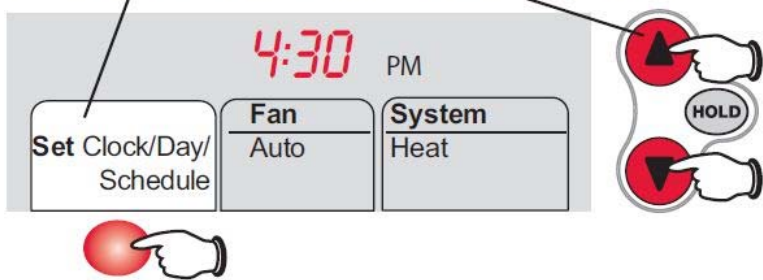

Press SET DAY, then select current day

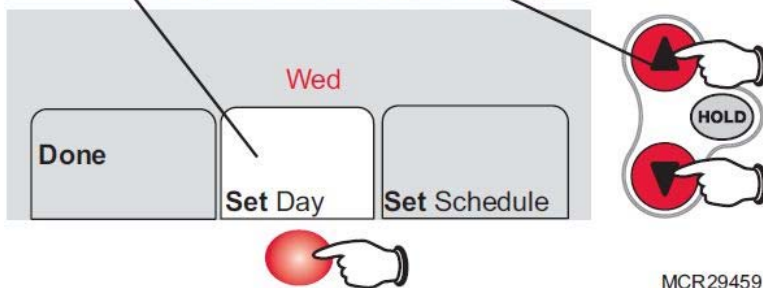

1. Press the SET CLOCK/DAY/SCHEDULE button, then press ▲ or ▼ to set the clock time.
2. Press the SET DAY button, then press ▲ or ▼ to select the day of the week.
3. Press DONE to save & exit.


Note: If the SET CLOCK/DAY/SCHEDULE option is not displayed, press DONE or RUN SCHEDULE.

Note: If the display flashes Set Clock, the thermostat will follow your settings for the weekday "Wake" time period until you reset the time and day.


Programming Your Thermostat

Set the time and day

Press SET CLOCK/DAY/SCHEDULE, then adjust time

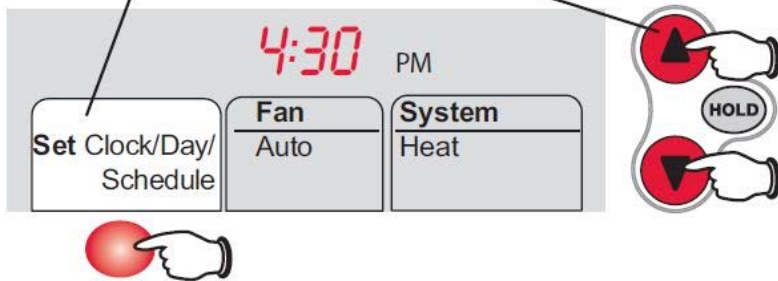

Press SET DAY, then select current day

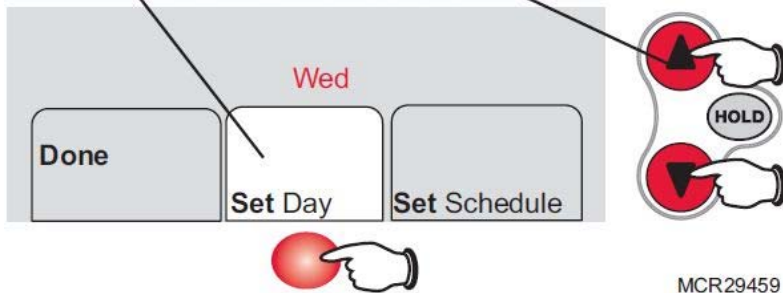

MCR29459


1. Press the SET CLOCK/DAY/SCHEDULE button, then press ▲ or ▼ to set the clock time.
2. Press the SET DAY button, then press ▲ or ▼ to select the day of the week.
3. Press DONE to save & exit.

Note: If the SET CLOCK/DAY/SCHEDULE option is not displayed, press DONE or RUN SCHEDULE.

Note: If the display flashes Set Clock, the thermostat will follow your settings for the weekday “Wake” time period until you reset the time and day.

Program schedule override (permanent)

Press to permanently adjust temperature.

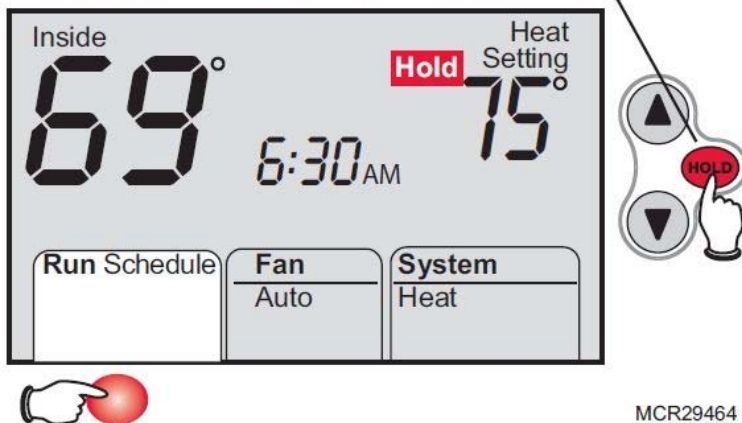

MCR29464

Press to cancel “Hold” setting and resume program schedule.

Note: Make sure the thermostat is set to the system you want to control (heat, cool or auto).

Press HOLD to permanently adjust the temperature. This will override the temperature settings for all time periods.

The “Hold” feature turns off the program schedule and allows you to adjust the thermostat manually, as needed.

Whatever temperature you set will be maintained 24 hours a day, until you manually change it, or press RUN SCHEDULE to cancel “Hold” and resume the programmed schedule.


Programming Your Thermostat

Thermostat Two



Setting the Current Time and Day

1. To Set Current Time.
 - a. Press Select twice.
 - b. Press ▲ or ▼ to set current time. While setting the current time, the word SET is displayed.

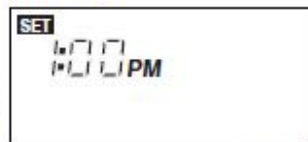

M12591A

2. To Set Day of Week.
 - a. Press Select again.
 - b. Press ▲ or ▼ to set current day.



M12593A


Programming Your Thermostat

Setting the Weekday Program

Slide the SYSTEM switch to the position, heating or cooling, you want to program. The flame (heating) or the snowflake (cooling) will appear in the lower right corner of the display.

3. WAKE

- a. Press Select.
Press ▲ or ▼ to set WAKE time.

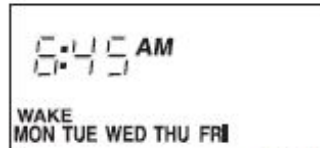

M12624A

- b. Press Select.
Press ▲ or ▼ to set WAKE temperature.



M12625B

4. LEAVE

- a. Press Select.
Press ▲ or ▼ to set LEAVE time.



M12626A


- b. Press Select.
Press ▲ or ▼ to set LEAVE temperature.



M12627A

5. RETURN

- a. Press Select.
Press ▲ or ▼ to set RETURN time.

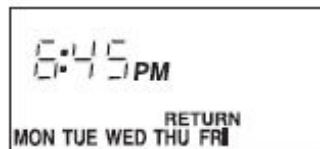


M12628A

- b. Press Select.
Press ▲ or ▼ to set RETURN temperature.



6. SLEEP

- a. Press Select.
Press ▲ or ▼ to set SLEEP time.

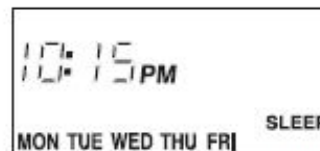

M12630A

- b. Press Select.
Press ▲ or ▼ to set SLEEP temperature.




M12631B

Programming Your Thermostat

Setting the Weekend Program

7. WAKE

- a. Press Select.
Press ▲ or ▼ to set
WAKE time.

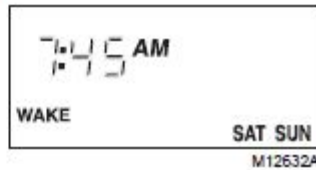


- b. Press Select.
Press ▲ or ▼ to set
WAKE temperature.



8. LEAVE

- a. Press Select.
Press ▲ or ▼ to set
LEAVE time.

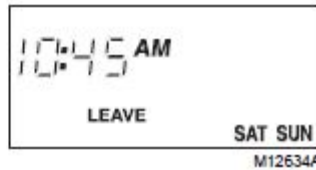


- b. Press Select.
Press ▲ or ▼ to set
LEAVE temperature.



9. RETRUN

- a. Press Select.
Press ▲ or ▼ to set
RETRUN time.

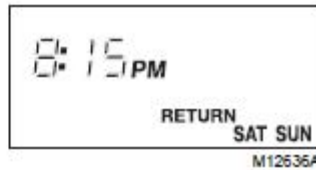


- b. Press Select.
Press ▲ or ▼ to set
RETRUN
temperature.



10. SLEEP

- a. Press Select.
Press ▲ or ▼ to set
SLEEP time.

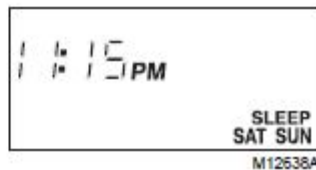

- b. Press Select.
Press ▲ or ▼ to set
SLEEP temperature.




Programming Your Thermostat

Setting Temperature Hold

Slide the SYSTEM switch to the heat or cool position.

Temporary Temperature Hold

1. Press ▲ or ▼ key to set a temporary temperature setting.

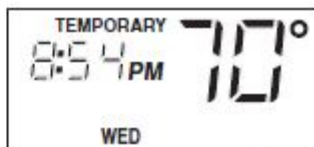

M12640A

NOTE: The temporary temperature setting is displayed for approximately 3 seconds. The setting remains in effect until the next program period. To cancel, press Hold twice.

Indefinite Temperature Hold

The Hold key allows you to indefinitely hold a temperature.

When Hold is active, the letters Hld are displayed continuously. Hold can be canceled by pressing the Hold key again.

1. Press Hold
2. Press ▲ or ▼ key to set indefinite temperature setting.



M12641A

NOTE: Indefinite hold remains in effect until the Hold key is pressed to cancel it.